

ANNEX VII

Setting code to enable Character output in different languages

To set the code to enable character output in different languages, scan the following code sequence in order. Steps 1 and 2 are common for all languages. Step 3 has to be the desired language. This third code can be found on page 10 of your user manual.

Step 1.



Step 2.



Step 3.

This last code must be the keyboard language that will enable the language's own characters such as í, ó, é, etc; In this example, the language code belonging to the *Spanish language is used.



Spanish

*For other languages, replace the Spanish code with the desired language which can be found on the language page of your user manual