

# Annex VI: Lighting And Aiming

## 1. Lighting

- **ON when reading (Default):** It is on when the scanner is reading, or it is off.
- **Always ON:** When it is powered on, the LED light is always on.
- **Always OFF:** It is not ON in any circumstance.



\* ON when reading



Always On



Always Off

## 2. Aiming

The aiming light is to help the user to focus the target code.

- **ON when reading (Default):** It is ON when the scanner is working.
- **Always ON:** It is always ON, when the scanner is power up.
- **Always OFF:** It is not ON in any circumstance.
- **Flash:** When set, the aiming light will flash.
- **Non-Flash:** When set, the aiming light will not flash.

Note: Flash and Non-Flash is working only when aiming LED is set to ON status.



\* ON when reading



Always ON



Always OFF



Flash



Non Flash