 


Charge Cart - 30 Devices

Intelligent Charging System

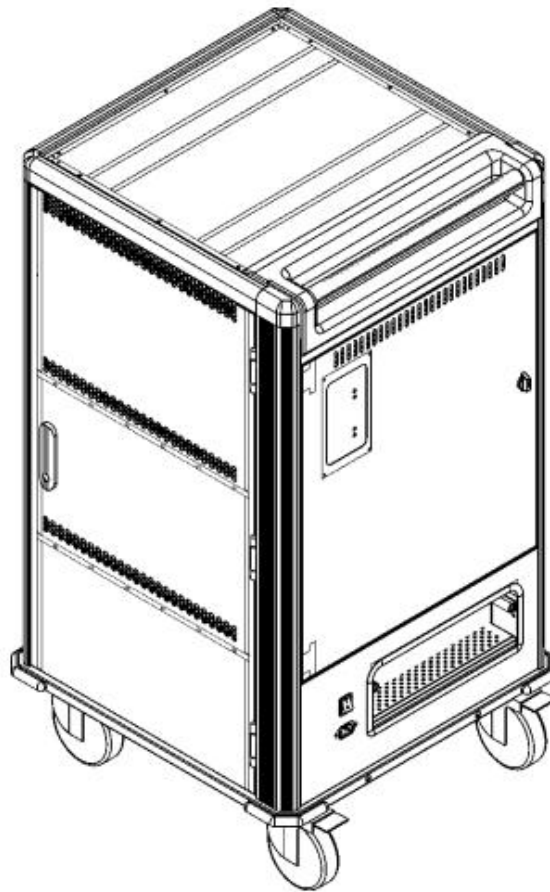

EW1700

TABLE OF CONTENTS

1 Safety and Warnings

2 Getting Started

Package Includes

Cart Diagram

Unboxing

Locking the Cart

3 Setup

Plugging in Devices

 
Advanced Features

4 Technical Specs

1 SAFETY + WARNINGS

CAUTION



- To reduce risk of electric shock only use this product indoors.
- This product is heavy. Use caution handling and keep upright. Do not attempt to unpack or move it unassisted.
- Use caution when unpacking and save the packing material for later use. Scratches and other damage caused by mishandling is not covered by the warranty.
- Do not allow anyone to sit, stand, or climb on this product.
- Do not block the ventilation holes used for air circulation.
- Do not overload heavy objects on or inside this product.
- Before moving this product, disconnect the power from the wall outlet.
- While moving this product, make sure the power cord is secured.
- This product should always be used by adults or with adult supervision.
- Never unplug this product from the outlet when hands are wet or by pulling the power cord.
- Do not use an extension cord in conjunction with this product.
- Connection to any other type of receptacle other than a two-pole, three-wire grounded receptacle may result in shock hazard as well as violate local electrical codes.
- In the event of an emergency, disconnect the power cord from the AC power outlet.
- Do not plug the input of this product into its own output.
- Do not attach an additional extension cord, power strip, or surge protector to this product.
- Do not attach non-computer-related items, such as medical equipment, life-support equipment, microwave ovens, or vacuum cleaners to this product.
- Place cables in such a way that they won't be pulled or snagged, and no one can step on or trip over them.
- Do not attempt to disassemble this product. This product contains no user replaceable parts. Only factory service personnel may perform repairs.
- If this product is misused, incorrectly operated or repaired, the warranty will be void.
- Do not remove plugs from outlets in use labeled "Do not remove" with a red sticker. These are required for the charging system and auxiliary outlets of the cart to function.
- **Service Door** - Please open only if requested by Ewent Technical Support.

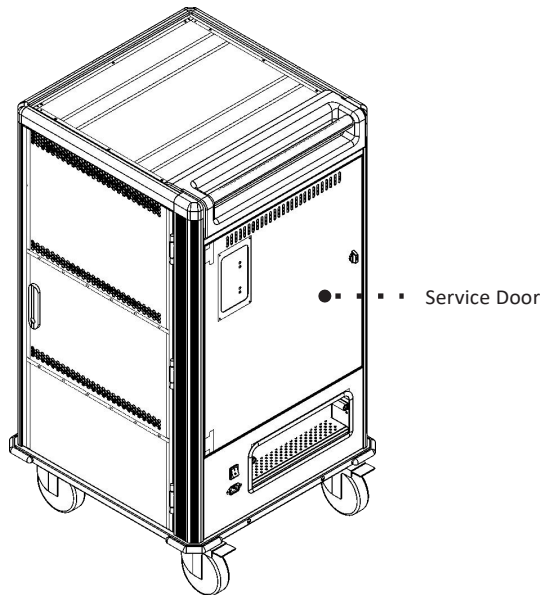


2 GETTING STARTED

Package includes

  - AC Power Cord
- Keys


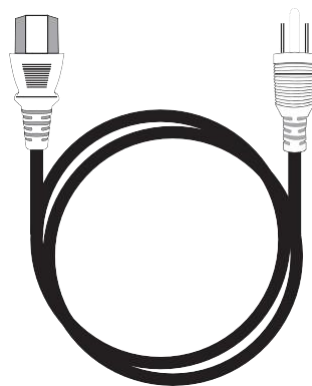
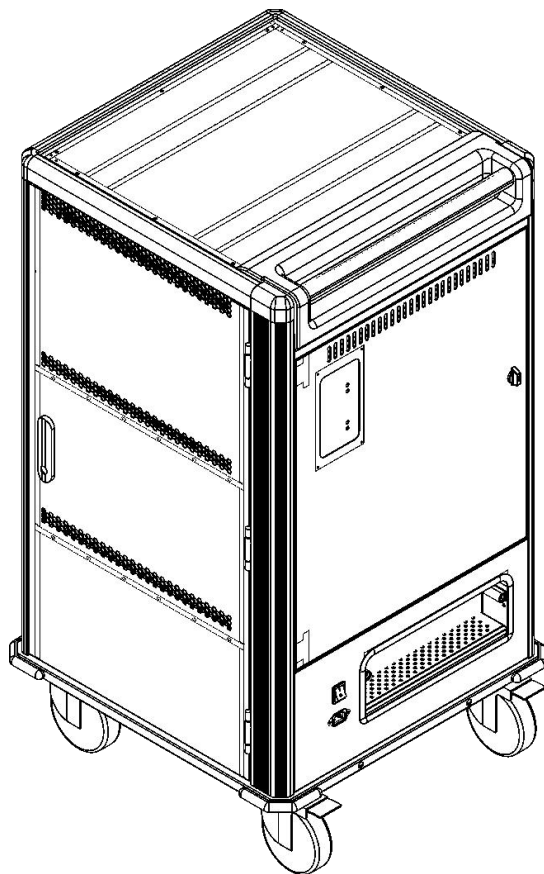


AC Power Cord

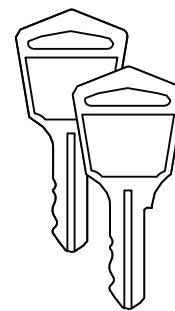 


Keys

   Cart Diagram
Front

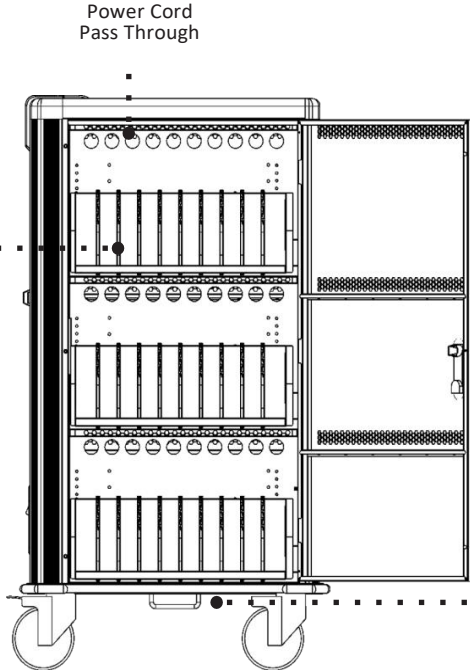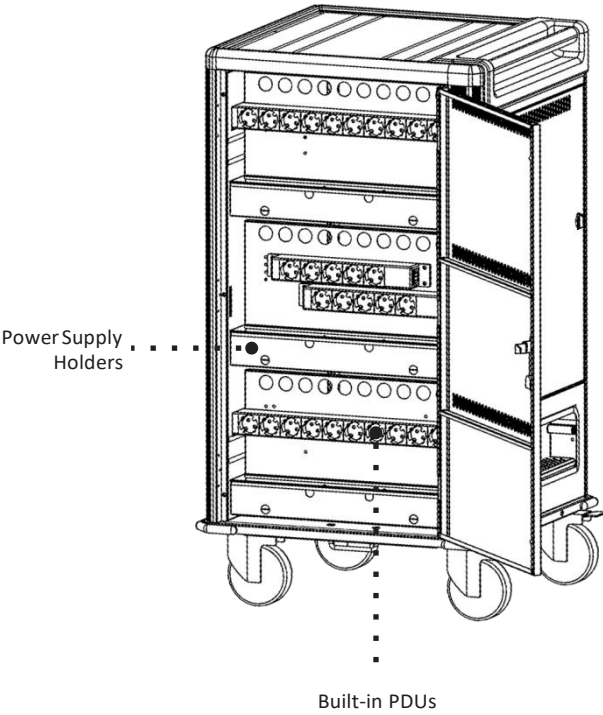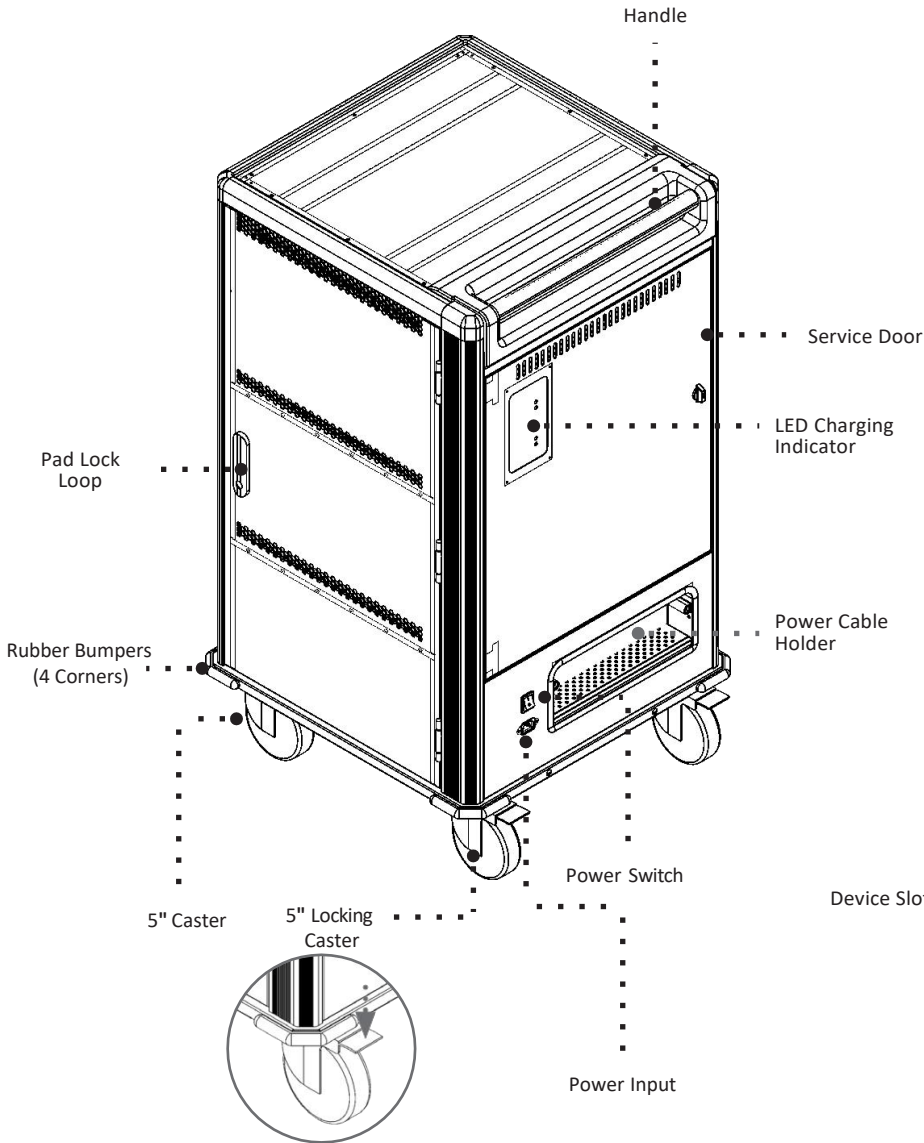


Locking Point
*Security Lock Not included

 
Remove from pallet

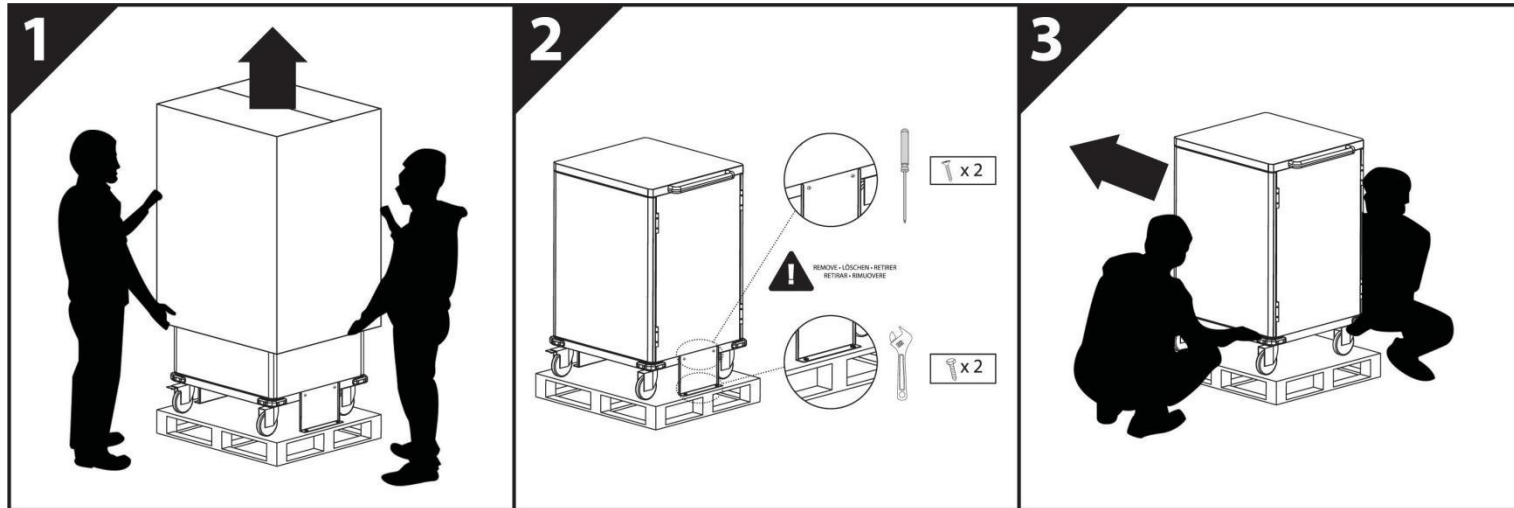

Open Doors
1. Lift Handle

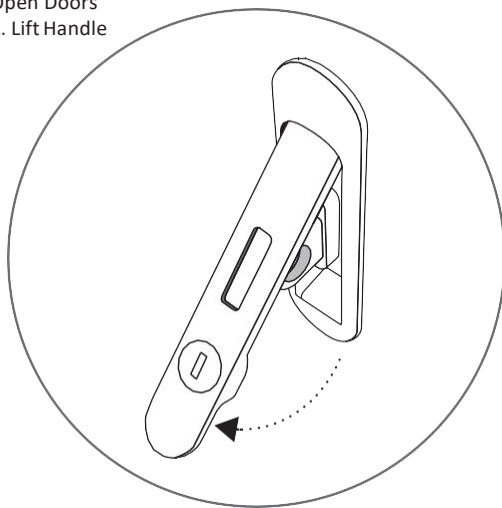 


 2. Turn left or right
to open


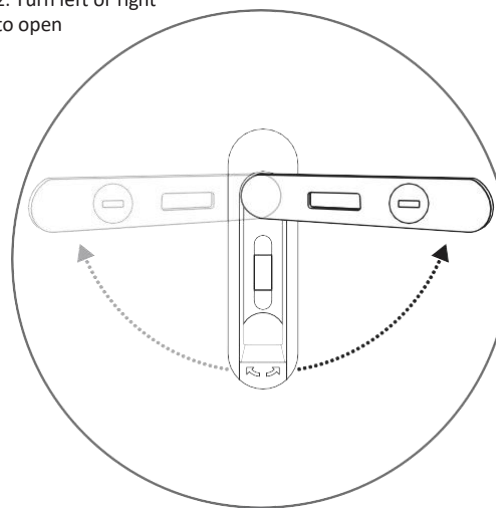


Door Locks

 Front/Back

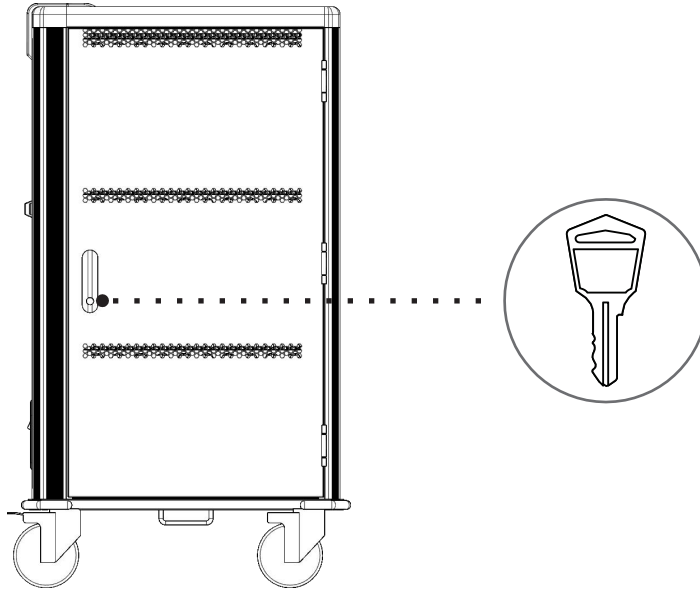


Pad Lock Loop

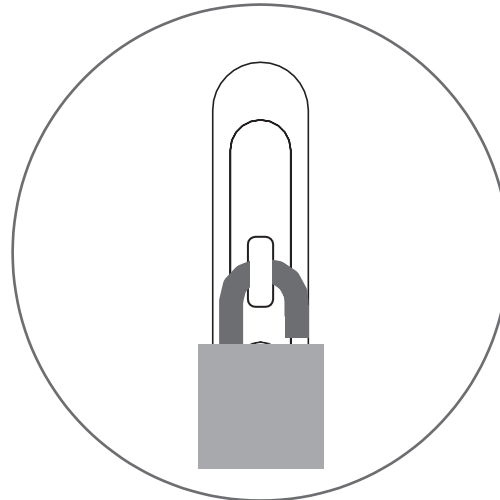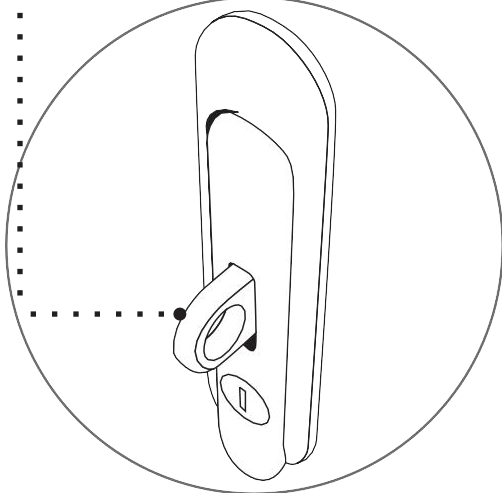  


***Pad lock not included**

3 SETUP

 
1. Plug cart into outlet

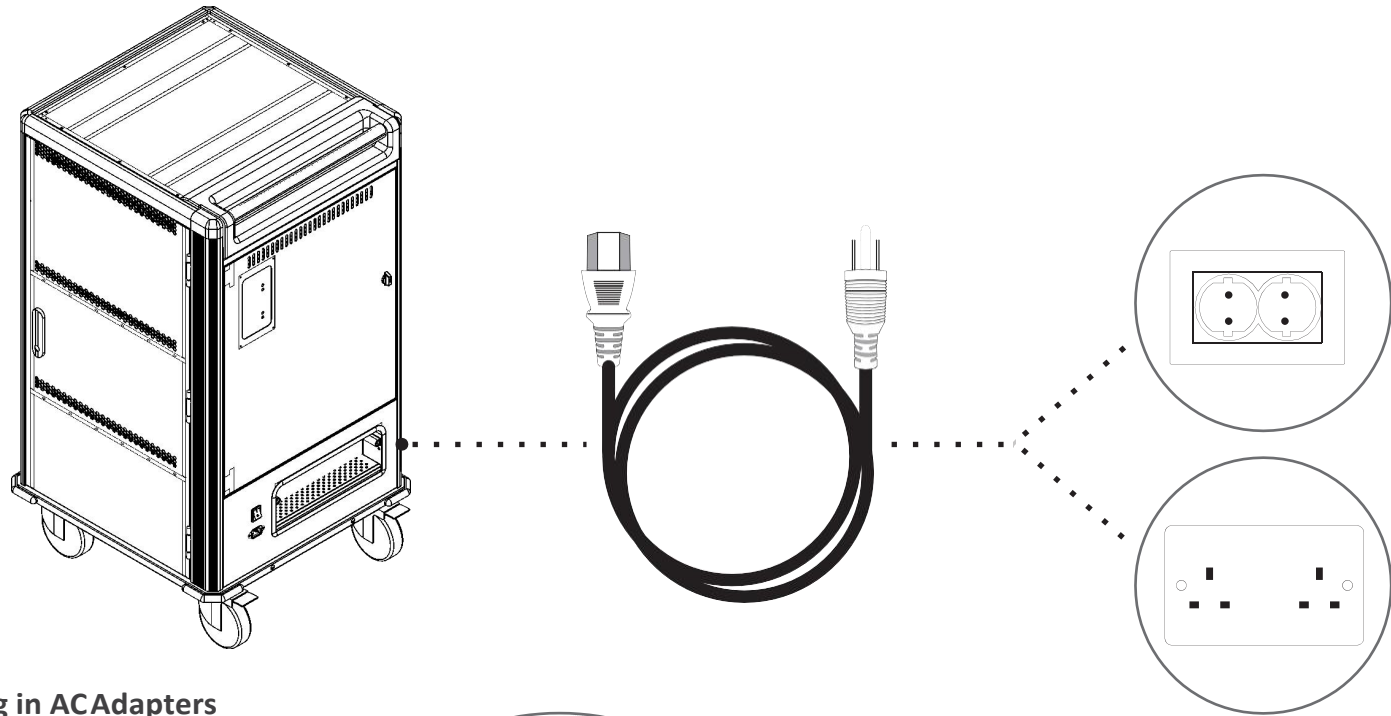

 
2. Plug in ACAdapters

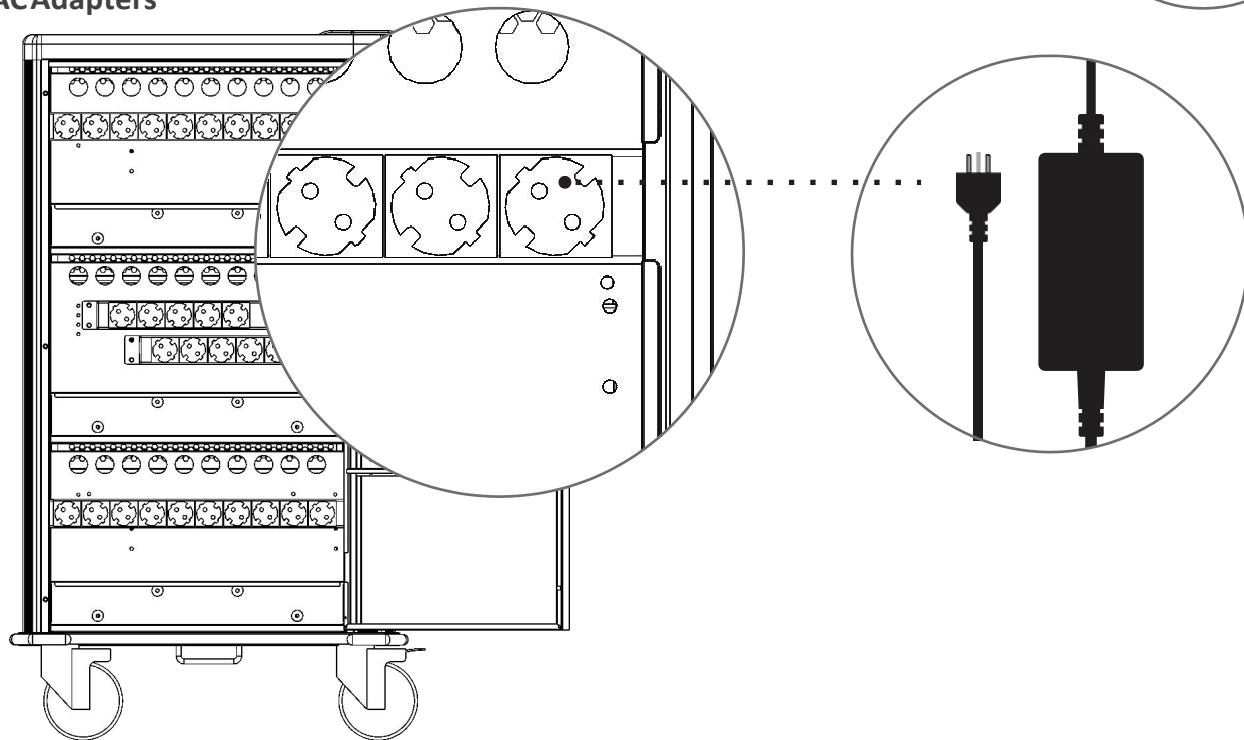

 
3. Place adapters into power supplyholders

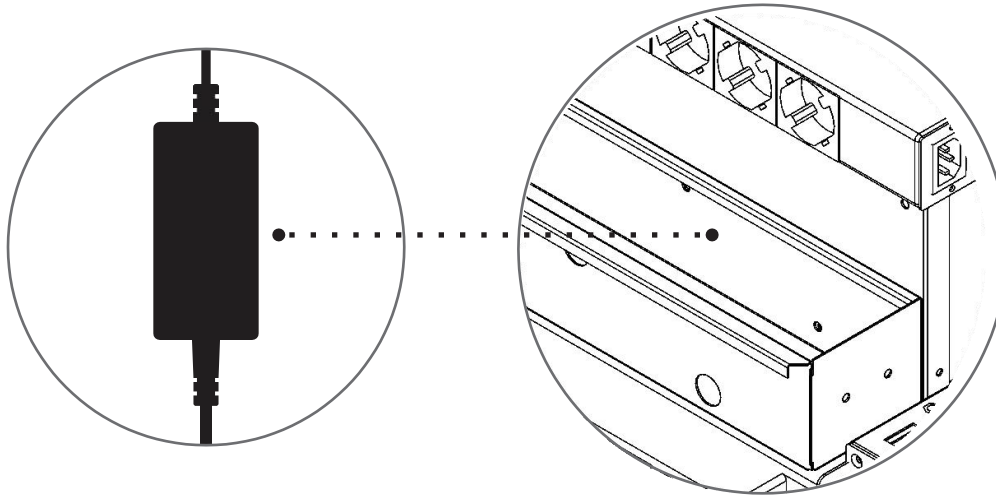

 
4. Insert the adapters through the pass through holes

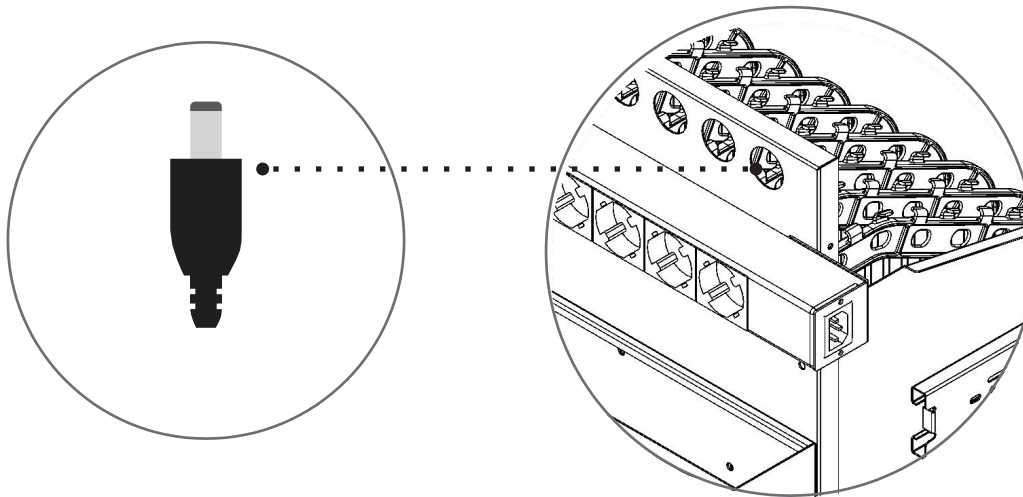

 5. Place the adapter wires on the cable holder dividers

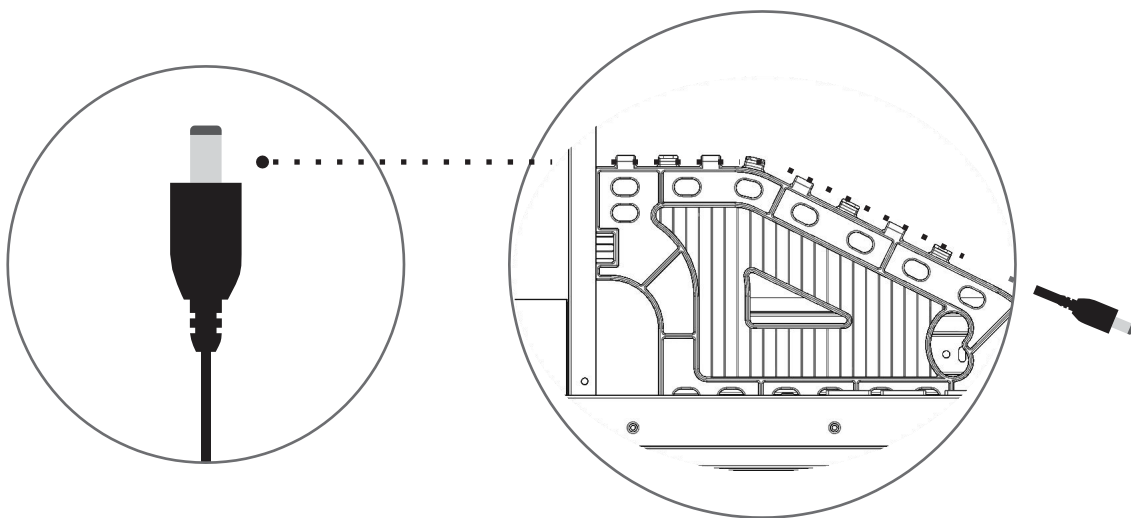

 6. Place the devices in the dividers

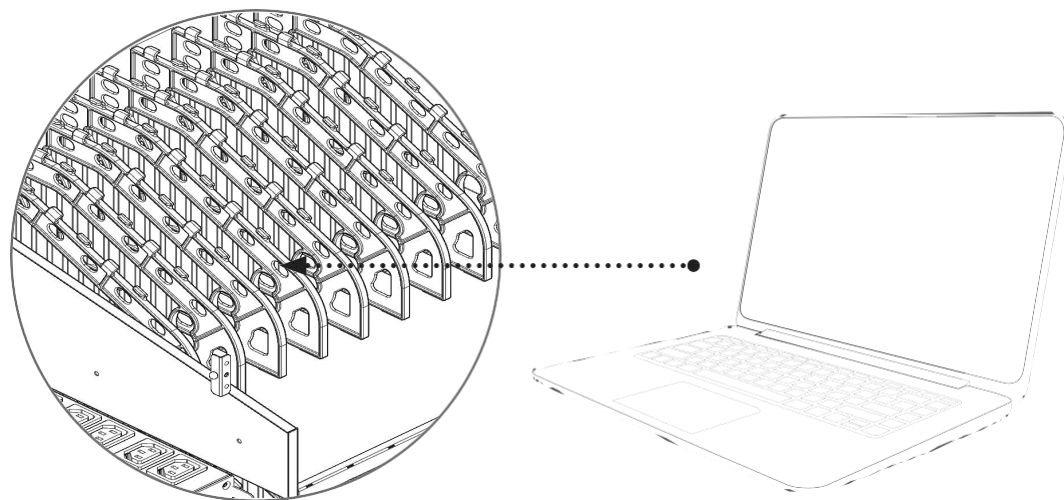

Charging System

Charging System

Charging all of your devices at one time can overload a typical circuit. EwentCharge Carts are equipped with an intelligent timing device that automatically switches the AC power supply from one half of the device outlets to the other to help protect against overload.

The charging system will provide power to the first half of the outlets for 15 minutes. When that time expires, the cart will change power to the other set, and continue to alternate sides. Once the total current is less than 14 amps, it will power all the outlets at once.

The LED indicator on the outside of the cart will show you which set is currently charging.


Charging System	Bank Sensor Intelligent
How it Charges	Cycle charging between 2 groups. When total current is less than 14a, full charging starts
LED Indicator	Red (On): Charging Off: Not Charging
Time to Charge 36 Computers	4.5 hours
Cart Switches to Full Charging	After 6 cycles (~3 hours)



The LED indicator
will illuminatered
when charging

4 TECHNICAL SPECS

 Cart Dimensions

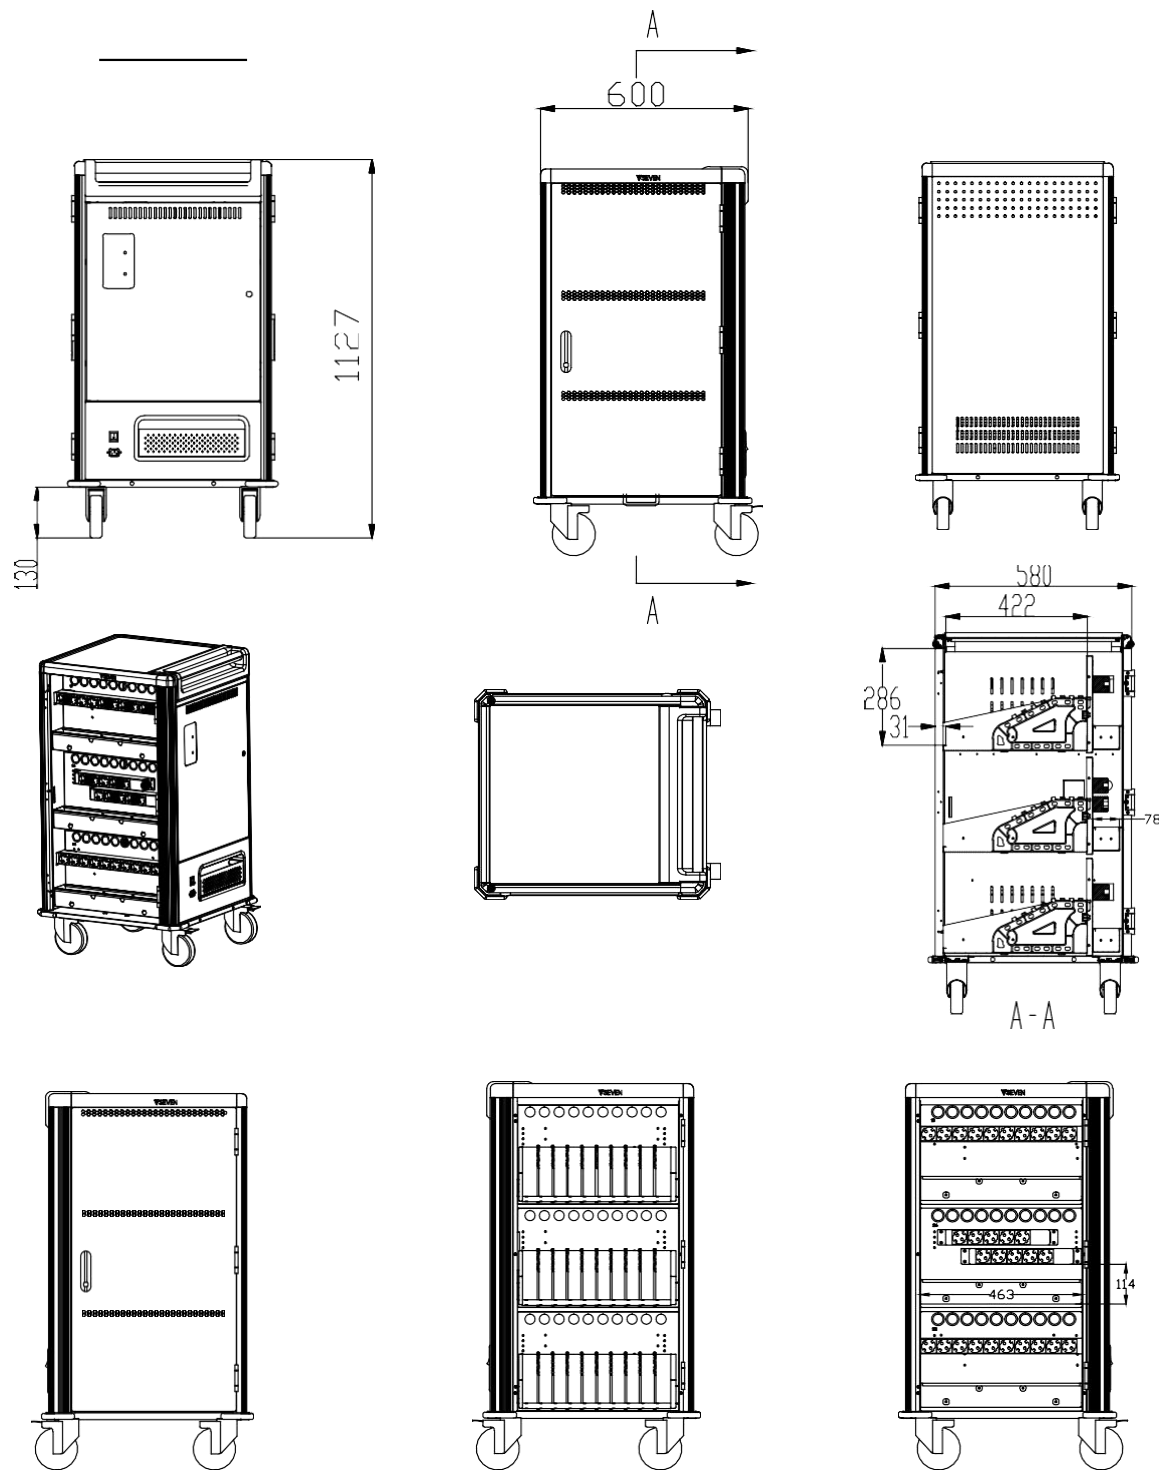

	EW1700
Color	Black and Dark Gray
Material	High-grade 18 gauge cold rolled steel
Numbered Device Spaces	30
Organization and convenience	Flexible device dividers with cable channels and numbered device slots, numbered power adapter slots with cable management, recessed push handle
Warranty	5 Year
Package Contents	Charging Cart, 6 ft (1.83 m) Power Cord, Manual
Input Voltage	230VAC, 15A, 60HZ
Output Voltage	230VAC, 15A, 60HZ
Charging System	Intelligent Charging
Rolling Casters size	5 in (12.7 cm)
Product Dimensions	600 x 580 x 1127 mm
Product Weight	75kg
Package Size	650 x 650 x 1280 mm
Package Weight	90 kg
Device slot dimensions	16.61 x 1.38 x 11.25 in (422 x 35 x 286 mm)
Power adapter slot dimensions	3.07x 18.22 x 4.48 in (78 x 463 x 114mm)
Safety & Compliance	CE,ROHS,FCC
Environment*	“Operating: -10°C to 40°C Humidity: 20% to 80% RH Storage: -40°C to +60°C Humidity: 20% to 90% RH”

*Note: For this charge cart only. Check the environment specifications of the devices you are storing.



