

EW3140
Wireless Mini Keyboard with built-in Touchpad

en

Manual

EW3140 Wireless Mini Keyboard with built-in Touchpad

Table of contents

1.0 Introduction	2
1.1 Functions and features	2
1.2 Packing contents	3
2.0 Explanation of the buttons	4
3.0 Using the EW3140 with your Eminent HD media player	5
3.1 Connecting the EW3140	5
3.2 Using the EW3140 to play a movie (or other media file)	5
3.3 Using the EW3140 with the web browser of a media player	5
3.4 Shortcut	6
4.0 Using the EW3140 on your computer	6
4.1 Installing and using the EW3140 as keyboard and mouse	6
4.2 Using the EW3140 with presentations	7
5.0 Other functions	7
5.1 Recharging	7
6.0 Frequently Asked Questions and other related information	7
7.0 Service and support	7
8.0 Warranty conditions	8

1.0 Introduction

Congratulations with the purchase of this high-quality Ewent product! This product has undergone extensive testing by Ewent's technical experts. Should you experience any problems with this product, you are covered by a five-year Ewent warranty. Please keep this manual and the receipt in a safe place.

Register your product now on www.ewent-online.com and receive product updates!

1.1 Functions and features

The Eminent EW3140 Wireless Mini Keyboard is the ultimate extension for your Eminent HD media player and Smart TV. Typing text is easy using the EW3140. When using your Eminent HD media player, visiting websites will become an experience. Use the touchpad of the EW3140 to easily navigate through websites. The EW3140 can also be used as remote control for your HD media player.

Some buttons on the EW3140 also act as shortcut when connected to your HD media player. You can use the 'O' button on the EW3140 to open the option menu while playing files, use the 'S' button to stop files etc.

Since the EW3140 also has a built-in keyboard and touchpad function, you will be able to control your computer or laptop, but also being able to present using one and the same device. The EW3140 even has the possibility to rotate the touchpad 90 degrees which is ideal for your presentations.

The EW3140 has a compact, elegant and contemporary design. Thanks to its compact design, the EW3140 is easy to carry. The USB receiver can be stored in the EW3140 itself.

The EW3140 is equipped with a Lithium-ion battery with a stand-by time up to a month. If the battery is depleted, you can easily recharge the battery by connecting the EW3140 to the supplied USB cable and connecting the other end to a USB port of your media player or computer.

Please note that functionality of buttons may vary , depending on the type media player or Smart TV you are using.

1.2 Packing contents

The following parts need to be present in the packing:

- EW3140 Wireless Mini Keyboard
- USB receiver
- USB cable (for recharging)
- Manual

2.0 Explanation of the buttons



- | | | |
|-----|----------------------------|--|
| 1. | F1/Help button: | Activates the help function (Windows). |
| 2. | Multimedia buttons: | Used to control media files (Windows). |
| 3. | Touchpad: | Used to control the mouse indicator in the same way as on a notebook) |
| 4. | Right mouse button: | Used to right-click an item. |
| 5. | Navigation buttons: | Used to navigate through the menu's (media player). |
| 6. | Left mouse button: | Used to left-click an item. |
| 7. | Alt button: | Used to rotate the touchpad in combination with the Fn button. |
| 8. | CTRL button | Shortcut (Windows). |
| 9. | USB connection: | Charging interface. Used to charge the EW3140. |
| 10. | On/Off switch: | Used to switch the EW3140 on and off. |
| 11. | Indicator LED's: | LED's which indicate the RF status, battery status etc. |
| 12. | USB receiver: | Needs to be connected to a free USB port of the media player/Smart TV or computer. |

3.0 Using the EW3140 with your Eminent HD media player

Please note that functionality of buttons may vary, depending on the type media player or Smart TV you are using.

3.1 Connecting the EW3140

1. Take the EW3140 and receiver out of the packing.
2. Make sure your media player is completely started.
3. Place the USB receiver into a free USB port of the media player.
4. Turn on the EW3140 by sliding the power button to the 'ON' position.
5. The media player will recognize the EW3140 automatically.

3.2 Using the EW3140 to play a movie (or other media file)

The EW3140 can be used on the same manner as the original remote control of the media player. We will explain how to play a movie with separate (SRT) subtitles.

1. Use the arrow buttons beneath the touchpad to navigate through the menu.
2. Go to 'Movies' and press the 'enter' button on the EW3140.
3. Press the 'O' button on the EW3140 if you want to see the 'Options' menu.
4. Select the movie you want to play and press the 'Enter' button on the EW3140 after which the movie starts to play.
5. To select the subtitle, press the 'O' button, select 'Subtitle' and press the 'Enter' button.
6. Select the subtitle and press the 'Enter' button on the EW3140 after which the subtitle starts to play.
7. If you want to stop the movie, press the 'S' button on the EW3140 after which the movie will be stopped.

3.3 Using the EW3140 with the web browser of a media player


1. Use the arrow buttons of the EW3140 to go to 'Apps' and press the 'Enter' button of the EW3140.
2. Select the web browser and press the 'Enter' button after which the browser page will be opened.
3. Press the 'O' button on the EW3140 after which the address bar will be shown.
4. Select the address bar and press the 'Enter' button.
5. You can now fill out the web address you want to visit.
6. Use the arrow buttons to select 'OK' and press the 'Enter' button on the EW3140.
7. Select 'Go' using the touchpad and click 'Go' using the left mouse button. The page will be opened.

8. You can use the touchpad and the mouse buttons to navigate through the website and be able to click links.
9. If you want to visit another website, then you have to press the 'O' button again and fill out a new website in the address bar.

3.4 Shortcut

The EW3140 has some buttons which function as shortcut. This can be handy while browsing or playing files on your media player. We will explain these shortcuts.

Please note that functionality of buttons may vary , depending on the type mediaplayer you are using.

Symbol	Function
ESC	Used to go back to the previous step. Also used to stop a file while being played.
Q	Used to change the screen resolution.
	Used to decrease the sound volume.
Tab	Used to enter the settings menu/turn back to the main menu.
A	Used to select/switch between audio sources while playing files.
G	Used to select the time frame window.
H	Used to select main menu options when a category (Movies etc) has been selected.
M	Used to mute the sound.
O	Used to open the address bar when using the web browser. Also used to open the 'Options' menu when a media file is being played.
S	Used to stop a file.
<	Used to slowdown a played file.
>	Used to fast-forward a played file.
Z	Used to zoom in while playing files.

4.0 Using the EW3140 on your computer

The EW3140 can also be used on your computer as a 'regular' keyboard and mouse. Also, the EW3140 can be used when presenting.

4.1 Installing and using the EW3140 as keyboard and mouse

1. Connect the USB receiver to a free USB port on your computer.
2. Turn on the EW3140 by sliding the power button to the 'ON' position.
3. It is possible Windows notifies you a keyboard and mouse have been found. Windows will automatically install the correct drivers.

4. You will now be able to use the EW3140 as keyboard and mouse. Also, the F1-F8 and multimedia buttons will be available.

4.2 Using the EW3140 with presentations

1. Once the EW3140 has been installed, you can also use the EW3140 as presenter. Use the following steps:
2. Use the EW3140 to select a presentation file such as a .PPT file.
3. Once the file has been opened, you can use the navigation buttons to select the next step of the presentation or to go back one step.

Hint: The touchpad can rotate 90 degrees by pressing the 'Fn' and 'Alt' button simultaneously. This is the ideal setting when presenting.

5.0 Other functions

5.1 Recharging

Once the battery of the EW3140 is depleted, the battery needs to be recharged. Once the battery is (almost) depleted, the battery symbol on the EW3140 will start to blink.

1. Connect the supplied USB cable to a free USB port of your computer or to a free USB port of your media player.
2. Once connected, the battery symbol will change to a red color.
3. As long as the battery symbol is red indicated, the battery is being recharged.
4. When fully recharged, the battery symbol will not be lit anymore.

6.0 Frequently Asked Questions and other related information

The latest Frequently asked questions for your product can be found on the support page of your product. Ewent will update these pages frequently to assure you have the most recent information. Visit www.ewent-online.com for more information about your product.

7.0 Service and support

This user's manual has been carefully written by Ewent's technical experts. If you have problems installing or using the product, please fill out the support form at the website www.ewent-online.com/

You can also contact us by phone. Please check www.ewent-online.com/ for the helpdesk phone number and opening hours.

8.0 Warranty conditions

The five-year Ewent warranty applies to all Ewent products, unless mentioned otherwise before or during the moment of purchase. After buying a second-hand Ewent product the remaining period of warranty is measured from the moment of purchase by the product's initial owner. Ewent warranty applies to all Ewent products and parts, indissolubly connected or mounted to the product it concerns. Power supply adapters, batteries, antennas and all other products not directly integrated in or connected to the main product or products of which, without reasonable doubt, can be assumed that wear and tear during use will show a different pattern than the main product, are not covered by the Ewent warranty. Products are not covered by the Ewent warranty when exposed to incorrect/improper use, external influences or when opening the service parts of the product by parties other than Ewent. Ewent may use refurbished materials for repair or replacement of your defective product. Ewent cannot be held responsible for changes in network settings by internet providers. We cannot guarantee that the Ewent networking product will keep working when settings are changed by the internet providers. Ewent cannot guarantee the working of web services, apps and other third party content that is available through Ewent products. Ewent products with an internal hard disk have a limited warranty period of two years on the hard disk. Ewent could not be held responsible for any data lost. Please make sure that if the product stores data on a hard drive or other memory source, you will make a copy before you return the product for repair.

When my product gets defective

Should you encounter a product rendered defective for reasons other than described above: Please contact your point of purchase for taking care of your defective product.

ewent
by emsart

www.ewent-online.com

Trademarks, all brand names are trademarks and/or registered trademarks of their respective holders.
The information contained in this document has been created with the utmost care. No legal rights can be derived from these contents. Emsart cannot be held responsible, nor liable for the information contained in this document.

CE

Ewent is a member of the Emsart Group