

EW3940/41/42/43 Line Interactive UPS – with AVR



EW3940/41/42/43 Line Interactive UPS with AVR

Table of contents

1.0 Introduction	2
1.1 Functions and features	2
1.2 Packing contents	3
2.0 Remarks about Safety	3
3.0 Working Principle	4
3.1 In AC mode	4
3.2 AC Failure	4
3.3 UPS outputs	5
3.4 Battery and Charging:	5
4.0 Main Features	5
4.1 Unattended Operation	5
4.2 Protection	5
4.3 Three Kinds of Alarm Function	5
4.4 Lock Phase Function	6
4.5 The Function of the Self-set Frequency	6
5.0 Specifications	6
6.0 UPS Led	7
7.0 Installation and Operation	7
8.0 Maintenance	8
8.1 Preventative Maintenance	8
8.2 Battery Maintenance	8
8.3 Handling of abnormity	9
9.0 Frequently Asked Questions and other related information	
10.0 Service and support	
11.0 Warning and points of attention	
12.0 Warranty conditions	

1.0 Introduction

Congratulations with the purchase of this high-quality Ewent product! This product has undergone extensive testing by Ewent's technical experts. Should you experience any problems with this product, you are covered by a five-year Ewent warranty. Please keep this manual and the receipt in a safe place.

Register your product now on www.ewent-online.com and receive product updates!

1.1 Functions and features

The EW3940/41/42 and EW3943 are UPS systems designed to effortlessly handle a power failure without the loss of important data. Because these devices are also

equipped with a backup function, you can shut down your computer or have it make a backup without the chance of losing data. These UPS systems are all equipped with a sound alarm which is activated as soon a power failure occurs, warning you to shut down your computer or to make a backup.

1.2 Packing contents

The following parts need to be present in the packing:

- EW3940/41/42 or EW3943 Line Interactive UPS with AVR
- Manual

2.0 Remarks about Safety

In order to keep safe in using the UPS, please comply with the following:

- Please charge the battery at least 24 hours before the UPS is in operation.
- After the battery is discharged or over three months without operation, the battery should be charged immediately for at least 12 hours, ensuring the battery is full and avoiding any unnecessary damage of the battery.
- The UPS is specially designed for computer only and it should not be connected with any inductive or capacitive load, like electromotor, daylight lamp, laser printer, etc.
- The UPS is not suitable for being used in life support systems, because it may
 have some problems and bring trouble to the life support systems. The
 responsibility will be users', if they insist on using the UPS in life support
 systems.
- It is normal that the temperature of the UPS surface reaches up to 50°C when it is in operation.
- When AC fails and the "ON" button on the front panel is pressed, the UPS will output voltage; if the "OFF" button on the front panel is pressed, the UPS will not output voltage.
- It is forbidden to open the case, because there is danger with electricity. If there is problem, please handle with the instruction of experts.
- It is forbidden to put container containing liquid inside on the UPS, because it will
 cause danger of electric shock or fire when the UPS short-circuits.
- When the UPS is abnormal, please cut off power immediately and turn to experts or the dealer for help.
- As there is no overload protection of the UPS, it cannot be overloaded.
 Otherwise, it would cause danger.
- It is strictly forbidden to place and operate the UPS in the following environment:
 - Place with inflammable gas or corrosive gas or much dust ;
 - Place with very high temperature or very low temperature (above 42°C or below
 - 0°C) or high humidity(above 90%);


- Place with direct sunlight or near heater;
- Place with strenuous vibration :
- Outside
- Please use dry powder fire extinguisher in case of fire; it is forbidden to use fluid fire extinguisher because it will cause electric shock.
- Please put the socket near the UPS, in this way, it is convenient to disconnect the socket and cut off power in case of emergency.

Attention! Please ground the UPS for safety purpose

3.0 Working Principle


3.1 In AC mode

When UPS is in normal working mode, AC goes through the filter and the harmful waves are filtered. After that, AC charges the battery and meanwhile, passes UPS AVR and the filter and provide power for the equipment.

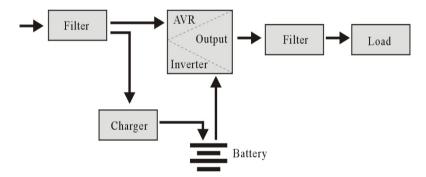

3.2 AC Failure

When AC fails, the battery will supply power to the inverter and then passes filter and provide power for the equipment, ensuring the continuous power supply.

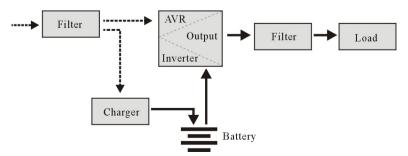

3.3 UPS outputs

The EW3940 UPS has 4 outputs:

- At the left side two outputs for power failure (surge/spike) protection.
- At the right side two outputs for power failure (surge/spike) protection with a backup function when AC fails. The built-in battery will supply power for continuous power supply for the equipment.

3.4 Battery and Charging:

- When the UPS is connected to AC, the charger will charge the battery fully in about 10 hours.
- When the battery is used up, please turn off the UPS and charge the battery for a least 10 hours when. Then turn on the UPS

4.0 Main Features

4.1 Unattended Operation

- Please connect the UPS to AC and press the ON button on the front panel, the UPS is turned on and the AC outputs stabilized voltage.
- When AC fails, UPS will supply power to the equipment immediately. And when the battery is used up, UPS will turn off automatically.
- When AC comes back, UPS will turn on automatically.

4.2 Protection

- Battery discharge protection: when the battery discharges and the UPS is in
 inverter mode, the UPS will check and monitor the working status of the battery;
 when the battery voltage drops to the limited lowest voltage, the inverter will turn
 off automatically and protect the battery; When AC comes back, the UPS will
 turn on automatically.
- Short-circuit Protection: when the UPS is in inverter mode and there is shock
 or short-circuit, UPS will output limited currency, protecting the UPS (When in AC
 mode, the UPS will be protected first by input fuse and then transfers to the
 inverter working mode).

4.3 Three Kinds of Alarm Function

- When AC fails, and the UPS supplies power, UPS will alarm once every 6 seconds and the beep stops about 40 seconds later.
- When the battery is nearly used up, the UPS will alarm automatically and the beep frequency is once every 2 seconds.
- When the battery is really used up, the UPS will alarm for a very long time and after 20 seconds, it will turn off automatically.

4.4 Lock Phase Function

In AC mode, the UPS system automatically tracks AC phase and ensures that the output wave form of the inverter is the same with AC voltage wave form. In this way, it reduces the peak pulse and surge voltage to minimizes the interference and damage to the equipment.


4.5 The Function of the Self-set Frequency

When the UPS is turned on for the first time, the acquiescence frequency is 50/60Hz; when it is connected to AC, the frequency is automatically set to 50Hz or 60Hz in accordance with AC.


5.0 Specifications

MODEL	EW3940 EW3941 650VA 720VA	EW3942 1000VA	EW3943 1200VA
Battery	12V/7 Ah x 1	12V/8 Ah x 1	12V/7 Ah x 2
Type of load	Computer, Display		
Input voltage	100/110/120/220/230/240 V ± 25%		
Input freq.	50/60 Hz ± 10%		
Output voltage	100/110/120/220/230/240 V ± 10%		
Output freq.	50/60 Hz ± 0,5-1% (in battery mode)		
Backup time	8 ~20 mins (rated computer as load)		
Transfer time	≤ 6 ms (650VA : ≤ 10 ms)		
Short-circuit protection	Fuse in AC mode, limited output current in inverter mode		
Efficiency of power	> 80% in inverter mode		
Temperature	0°C -40°C		
Humiduty	10% ~90%		
Display	LED display: AC, charging, inverting		

 6.0 UPS Led



Model: EW3940

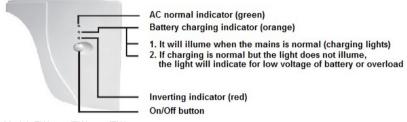

Model: EW3941/EW3942/EW3943

7.0 Installation and Operation

- 1. Shut down the load (for example PC)
- 2. Put UPS on the proper position
- 3. Connect load(for example PC) to the UPS
- 4. Put the plug to the AC power socket(make sure GND is connected well)

SUGGESTION: This UPS is the power supply for the computer, monitor and hard disk(CD) etc. It has a limited backup time for the load, so you'd better not connect a printer or other equipment to it.

- AC mode: press the on/off button on the UPS, the green LED and yellow LED light up, then you can turn on your computer etc.
- 6. Battery mode: press the on/off button on the UPS, the red LED lights up, then you can turn on your computer etc.

Remark:

- Generally speaking, don't turn off the UPS so the battery keeps charging.
- 2. When AC fails the UPS will turn to battery mode. Please save important documents in time

8.0 Maintenance

8.1 Preventative Maintenance

Preventive Maintenance ensures the longer Service life of UPS. Please check the following steps every month:

- 1. Turn off the UPS;
- 2. Make sure the air grid is not blocked;
- 3. Make sure that the UPS surface is not covered by dust;
- 4. Check whether the input and output connectors are firmly connected
- 5. Make sure that the UPS is not affected with damp;
- 6. Turn on the UPS:
- Let the UPS work in battery mode for about 5 minutes. If there is no other alarm in this period, then the UPS is working normal; if there is another alarm message, please contact the local dealer for help.

8.2 Battery Maintenance

The UPS contains a sealed lead-acid maintenance-free battery (batteries). Bad environmental conditions, to high discharge frequency, to high temperature, etc will dramatically reduce the battery life. The battery life will also reduce even if it is not used. It is suggested to discharge the battery once every 3 months when AC is normal. The following steps explains how to check the battery. When the battery is near the end of its life, the battery will end in bad performance. So, please remember the following steps of checking and maintenance:

- Connect the UPS to AC and turn on the UPS, charge the battery for at least 10 hours. Do not attach any load to the UPS while charging.
- Connect any load to the UPS (UPS and Surge outputs) and remove the input plug from the UPS to simulate AC failure. The battery of the UPS will discharge until the UPS turns off automatically. Please record the connected load and discharge time for a later check.
- The battery service life is about 2 to 3 years in normal conditions. But in such
 condition as: high temperature or high discharge frequency, the battery service
 life will reduce to about 0.5 to 1 year.
- 4. When the discharge time is 80% of the initial discharge time, the performance of the battery will be weakened faster and accordingly the checking frequency of the battery should be changed to every month.

8.3 Handling of abnormity

The UPS can serve and provide protection to users' equipment, but if there is something abnormal, please turn to local UPS dealer for help, avoiding unnecessary damage to the UPS.

When the UPS has the following problems, please follow the Steps below and if the problem still cannot be solved, Please contact the local dealer.

Phenomenon	Trouble Shooting
Battery fails to supply power.	Check whether the battery
	isn't charged enough?
	Check whether the UPS is
	turned on correctly?
UPS doesn't turn to AC (the input	Check whether the fuse is broken?
plug of the UPS has been plugged	The fuse is placed on the UPS back
into the AC socket and AC is normal,	panel or near the AC input
and the "on/off" button has been	After disconnecting the AC plug, put out
pressed, but the AC indicating light	the fuse and check whether the fuse is
is not bright and the alarm beeps.	broken, if so, please replace it with a new
	fuse.
When AC fails, the computer	When AC is working normal, please turn
doesn't work.	on the UPS and charge the battery for at
	least 10 hours. Please be sure the load is
	connected to the correct output
AC output is normal, but the alarm	AC is over voltage or low voltage.
beeps.	

9.0 Frequently Asked Questions and other related information

The latest Frequently asked questions for your product can be found on the support page of your product. Ewent will update these pages frequently to assure you have the most recent information. Visit www.ewent-online.com for more information about your product.

10.0 Service and support

This user's manual has been carefully written by Ewent's technical experts. If you have problems installing or using the product, please fill out the support form at the website www.ewent-online.com/

You can also contact us by phone. Please check <u>www.ewent-online.com/</u> for the helpdesk phone number and opening hours.

11.0 Warning and points of attention



Due to laws, directives and regulations set out by the European parliament, some (wireless) devices could be subject to limitations concerning its use in certain European member states. In certain European member states the use of such devices could be prohibited. Contact your (local) government for more information about this limitations.

Always follow up the instructions in the manual*, especially where it concerns devices which need to be assembled.

Warning: In most cases this concerns an electronic device. Wrong/improper use may lead to (severe) injuries!

Repairing of the device should be done by qualified Ewent staff. The warranty immediately voids when products have undergone self repair and/or by misuse. For extended warranty conditions, please visit our website at www.ewent-online.com.

*Tip: Ewent manuals are written with great care. However, due to new technological developments it can happen that a printed manual does not longer contain the most recent information.

If you are experiencing any problems with the printed manual or you cannot find what you are looking for, please always check our website www.ewent-online.com first for the newest updated manual.

Also, you will find frequently asked questions in the FAQ section. It is highly recommended to consult the FAQ section. Very often the answer to your questions will be found here.

12.0 Warranty conditions

The five-year Ewent warranty applies to all Ewent products, unless mentioned otherwise before or during the moment of purchase. After buying a second-hand Ewent product the remaining period of warranty is measured from the moment of purchase by the product's initial owner. Ewent warranty applies to all Ewent products and parts, indissolubly connected or mounted to the product it concerns. Power supply adapters, batteries, antennas and all other products not directly integrated in or connected to the main product or products of which, without reasonable doubt, can be assumed that wear and tear during use will show a different pattern than the main product, are not covered by the Ewent warranty. Products are not covered by the Ewent warranty when exposed to incorrect/improper use, external influences or when opening the service parts of the product by parties other than Ewent. Ewent may use refurbished materials for repair or replacement of your defective product. Ewent cannot be held responsible for changes in network settings by internet providers. We cannot guarantee that the Ewent networking product will keep working when settings are changed by the internet providers. Ewent cannot guarantee the working of web services, apps and other third party content that is available through Ewent products. Ewent products with an internal hard disk have a limited warranty period of two years on the hard disk. Ewent could not be held responsible for any data lost. Please make sure that if the product stores data on a hard drive or other memory source, you will make a copy before you return the product for repair.

When my product gets defective

Should you encounter a product rendered defective for reasons other than described above: Please contact your point of purchase for taking care of your defective product.



Trademarks: all brand names are trademarks and/or registered trademarks of their respective holders.

The information contained in this document has been created with the utmost care. No legal rights can be derived from these contents. Eminent cannot be held responsible, nor liable for the information contained in this document.

CE

www.ewent-online.com

Ewent is a member of the Eminent Group